

Armerah eGo Mini Protank Clearomiser with Replaceable Coil

General Instructions and Guidance

Before fitting the clearomiser to a battery you should first clean inside the bottom of the clearomiser and the top of the battery. Gently use rolled up paper tissue or a lint free cleaning cloth to clear any stray e-liquid from the electrical contact areas. A quick clean can be achieved by blowing sharply into both devices. Then screw the clearomiser into the battery in a clockwise direction, DO NOT OVER-TIGHTEN.

To remove the clearomiser from a battery, first grip the metal ring at the bottom of the clearomiser just above the battery button and unscrew the battery in an anticlockwise direction. Do not grip the tank body as this might cause it to unscrew from its base causing liquid spillage.

Due to natural efficiency loss over time, the vapour production or the flavour quality of your vape will eventually deteriorate. When this happens you should replace the coil or clean the device as described below.

Refilling

Refill once the tank is down to approximately 10 to 20% full. This is accomplished from the bottom of the clearomiser and so it must first be removed from the battery as directed above. Then unscrew and remove the base in an anticlockwise direction being careful not to displace the silicone sealing rings, put the base and coil assembly carefully to the side. Now hold the clearomiser tank at an angle of approximately 45 degrees with the mouthpiece pointing downwards. Refill slowly through the bottom up to the top of the central tube by placing the spout tube of your e-liquid bottle down the inside of the tank and gently squeezing. The level can be seen through the tank glass, take care not to spill the e-liquid into the central tube.

Replace the base securely then blow gently down the mouthpiece to clear any spilled liquid from the central tube. Blow sharply into the bottom of the atomiser and the top of the battery to clear any stray e-liquid from the electrical contact areas or clean gently using a paper power or cloth. Then screw the clearomiser back onto the battery in a clockwise direction, DO NOT OVER-TIGHTEN. We recommend you wait 10 to 15 minutes before use after first filling a new device to ensure the e-liquid has soaked thoroughly into the wicks and coil.

Maintenance, Replacing Coils and Cleaning

If the quality of your vape deteriorates then first check that the clearomiser is not near to empty (less than 10% full) and that the battery has not discharged. If not then the coil should be removed and cleaned or replaced.

To replace the coil you must first remove the clearomiser from the battery. Grip the metal ring at the bottom of the clearomiser just above the battery button and unscrew the battery in an anticlockwise direction. Now hold the clearomiser tank upside down in one hand then grip the metal base ring in your other hand and unscrew it in an anticlockwise direction until it has separated from the tank. Unscrew the coil head from the base and replace with a new coil. Be careful not to spill any liquid that is left in the tank. Refill as normal if necessary then screw the base and coil assembly back into the tank in a clockwise direction and tighten securely via the base ring. Clean thoroughly before refitting to the battery.



To clean your clearomiser first remove it from your battery, then remove the base ring and coil as described above and empty any remaining e-liquid. Rinse all components in hand hot (not boiling) water. Take care not to displace the silicone sealing ring fitted to the base assembly. The components should then be left to dry thoroughly for 24 hours before reassembling and refilling.



You must be eighteen (18) years of age to purchase any of our electronic cigarette products.



Complies with relevant European standards.

Excessive gurgling or bubbling can usually be cured by cleaning the clearomiser. There are three main causes:

1. This can occur if liquid gets into the centre airflow tube usually during filling. To clear this first remove the tank from the battery then blow gently through the mouthpiece into a paper towel. The excess liquid will come out of the threaded end of the device. If this happens often you may need to check that all connections are screwed down tightly or replace the head and wick assembly with a new one for those with replaceable coils.
2. The mouthpiece may have some condensation internally. Clean out using rolled up paper tissue or a lint free cleaning cloth. A quick clean can be achieved by shaking sharply at the mouthpiece hole to remove the condensation.
3. The breathe holes may be blocked in the base. These are two small holes in either side of the base ring, ensure these are completely clear and clean.

Draw strongly through the clearomiser to ensure it is clear before replacing.

Resistance Values

All our atomisers are fitted with a 2.5 ohm coil as standard, this is the preferred value and is suitable for the majority of vapers. Different atomisers from other suppliers may have different resistance values. Coils for our Mini Protank model are available with a choice of three resistance values. The lower the resistance the stronger the throat hit but this will also reduce the life the coil meaning it would have to be replaced more often.

Typically:

Strong Vape 1.8 ohms - gives a high throat hit but shorter lifespan. It is best suited for light to moderate vapers using a standard eGo battery (not variable) but it is prone to dry or burnt hits when used by heavy vapers.

Regular Vape 2.5 ohms - gives a medium throat hit with an average lifespan. It is best suited for heavy vapers using a standard eGo battery or for light to moderate vapers using a variable eGo battery such as the Twist or VV at voltage settings below 4.0 volts.

Mild Vape 3.0 ohms - gives a low throat hit but longer lifespan. It is best suited for heavy vapers using a standard eGo battery or for light to moderate vapers using a variable eGo battery such as the Twist or VV at voltage settings above 4.2 volts.

Technical Specifications

Coil resistance: 2.5 ohms +/- 10%.

Capacity: 2.0 ml.

Warranty and Returns

As with all atomisers these are considered consumable items with an average lifespan of between 2 to 4 weeks, they cannot be returned once they have been opened or used for health and safety reasons. However they are covered by our "dead on arrival" warranty. In the unlikely event that you receive a faulty or incorrectly supplied item please notify us within 48 hours to arrange an exchange.



You must be eighteen (18) years of age to purchase any of our electronic cigarette products.



Complies with relevant European standards.